 


N° Object	Code	Description	Qty
98	481913	Terminal board for oven 32 PA 233	1
175	ZS0140	Complete spill tray top 120 5 burners fish-kettle+barbecue	1
261	ZS0499	Cast-iron grid for fish kettle without joint	1
268	ZS0511	Cast-iron grid 2 burners Sintesi	2
731	ZS0565	Cast-iron grid for wok	1
794	ZS1058	Vitroglass for fry-top/barbecue	1
1023	ZS2093	Sintesi upper right side clamp 62.5 extended	1
1024	ZS2094	Sintesi upper left side clamp 62.5 extended	1
1060	GR2149	Assembly frontal bar profile top 120 polished	1
1061	ZS2163	Blocking device for frontal bar profile top SLT	2
1612	ZS3020	Support for connection top-base	2
1667	ZS3012	Upper lateral panel right side	1
1668	ZS3014	Upper lateral panel left side	1
4063	ZS6375	Ramp hole closing plate	1
4652	ZS7098	Rear guard for hob 120	1
4654	ZS7254	Lower guard for hob 120	1
5082	ZS7958	"Steel - Stile in cucina" plate	1
5777	ZS3933	Support for back splash h. 4 cm cooker 120 Sintesi	1
5842	ZS8867	Support for back splash h. 4 cm cooker 090 Sintesi internal	1

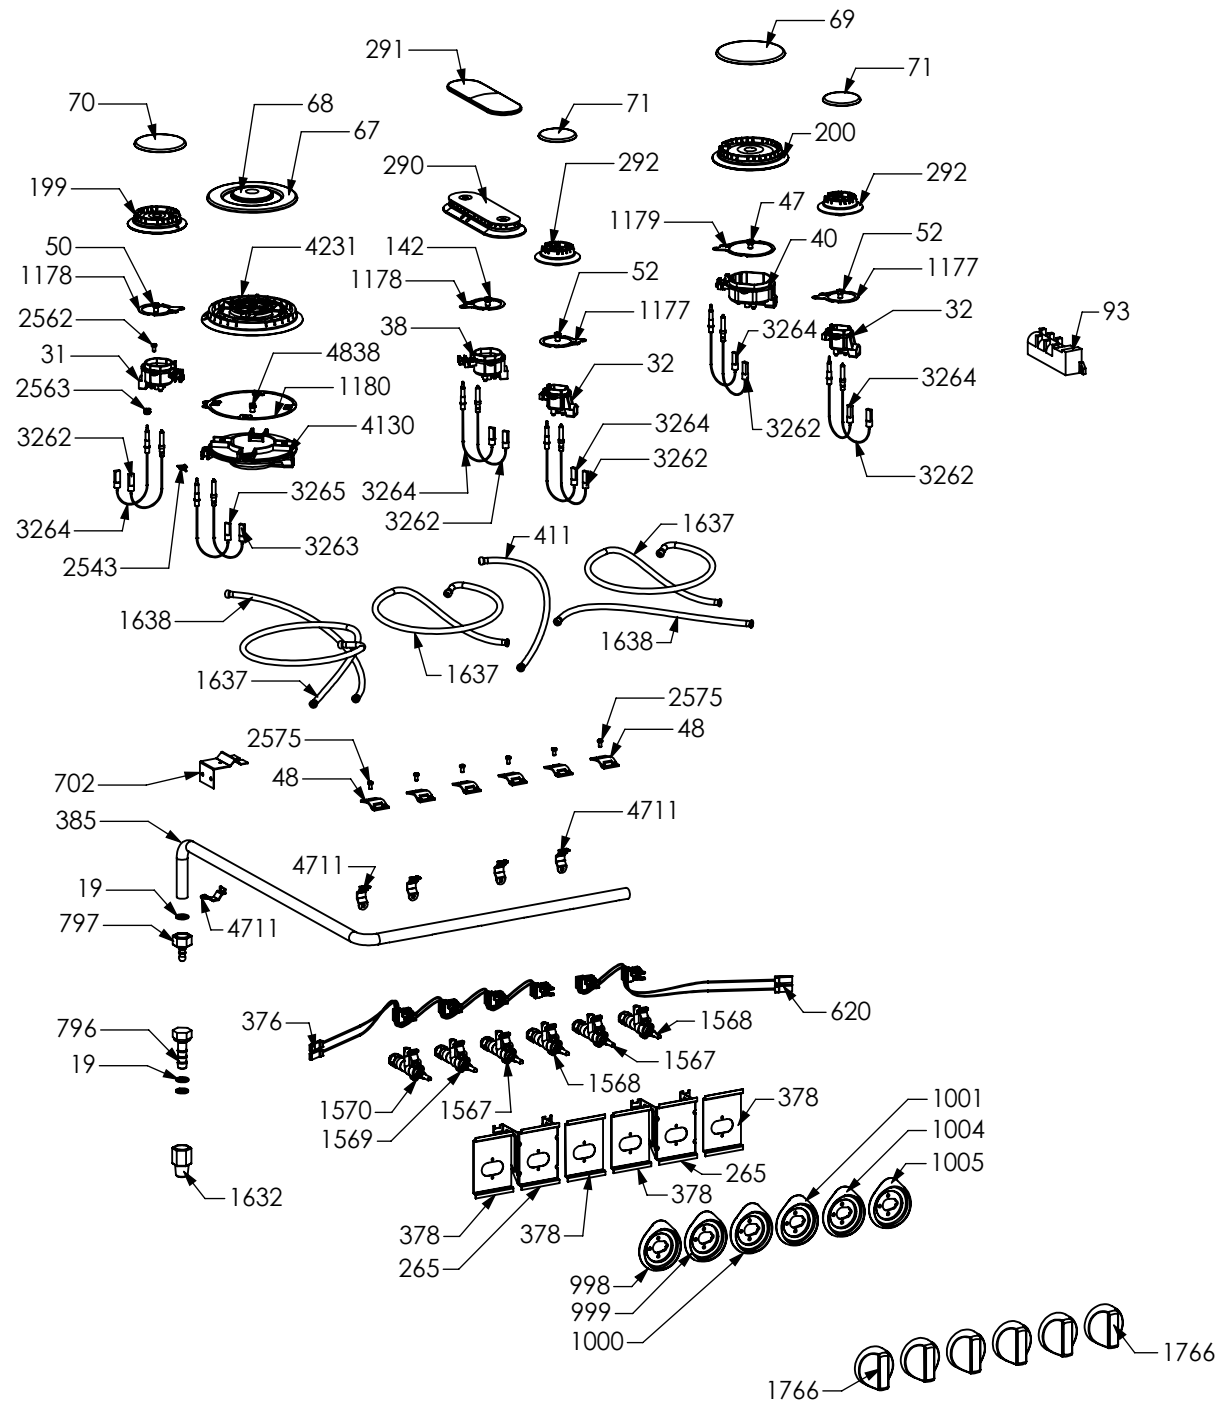 


Piano genesi G12-6B SS Steel G20/20 230/50 EU

011

N° Object	Code	Description	Qty	N° Object	Code	Description	Qty
19	400689	Gasket gas inlet	3	796	410610	Pipe holder (G20)IT	1
31	414121	Semi-rapid burner body G20 0,97	1	797	410645	Pipe holder (G30)	1
32	414123	Auxiliary burner body G20 0,72	2	998	ZS1646	Bezel for front left burner knob 58, bright chromed	1
38	414159	Semi rapid burner body G25 0,94 (fish-kettle G20)	1	999	ZS1647	Bezel for rear left burner knob 58, bright chromed	1
40	414212	Rapid burner body G20 1,15	1	1000	ZS1648	Bezel for front central left burner knob 58, bright chromed	1
47	421312	Rapid burner nozzle G30/31 29/37 mbar 0,85	1	1001	ZS1649	Bezel for rear central left burner knob 58, bright chromed	1
48	421323	Gas taps fixing bridle M60	6	1004	ZS1652	Bezel for front right burner knob 58, bright chromed	1
50	423948	Semi-rapid burner nozzle G30/31 0,65	1	1005	ZS1653	Bezel for rear right burner knob 58, bright chromed	1
52	423951	Auxiliary burner nozzle G30/30 0,50	2	1177	ZS2217	Gasket for auxiliary burner	2
67	440400	Plate triple-crown burner	1	1178	ZS2218	Gasket for semi-rapid burner	2
68	440401	Plate central triple-crown burner	1	1179	ZS2219	Gasket for rapid burner	1
69	440403	Plate rapid burner	1	1180	ZS2220	Gasket for triple ring burner	1
70	440404	Plate semi-rapid burner	1	1567	ZS2923	Valved tap for auxiliary burner (bypass 0,27)	2
71	440405	Auxiliary burner cap	2	1568	ZS2924	Valved tap for rapid/fish-kettle burner	2
93	481787	Ignition system 4 flames	2	1569	ZS2925	Valved tap for semi-rapid burner	1
142	ZS0053	Fish-kettle burner nozzle G30/30 0,68	1	1570	ZS2926	Valved tap for triple-ring burner	1
199	ZS0275	Semi-rapid burner flame spreader	1	1632	ZS3021	Adapter female-male 1/2 BSP 04	1
200	ZS0276	Rapid burner flame spreader	1	1637	ZS3058	Pipe ramp for front left triple ring burner cooker 90 05	3
265	ZS0504	Ramp fixing support	2	1638	ZS3059	Pipe ramp for rear left semi-rapid burner cooker 90 05	2
290	ZS0575	Fish kettle burner flame spreader	1	1766	ZS3155	Knob 58 for gas burners SLT	6
291	ZS0576	Plate fish kettle burner	1	2543	601229	Spring fixing spark plug for triple ring P-4	1
292	ZS0577	Auxiliary burner flame spreader	2	2562	506037	Screw M3x8 TC s.steel	14
376	ZS0813	Micro catenary for 4 burners	1	2563	ZS0907	Fixing nut for themocouple	6
378	ZS0819	Under knob collars fixing support	4	2575	505241	Screw M4	6
385	ZS0880	Ramp 6 burners top 120	1	3262	ZS5270	Burner spark plug Cast	5
411	ZS0979	Pipe ramp for rear central fish-kettle burner for cooktop 90	1	3263	ZS5271	Triple ring burner spark plug Cast	1
620	ZS1746	Micro catenary for 2 burners	1	3264	ZS5272	Thermocouple Cast L=770	5
702	ZS1900	Rear ramp fixing support cooker 70/90/120	1	3265	ZS5273	Thermocouple Cast L=750 TC 3.3	1

N° Object	Code	Description	Qty
4130	ZS6428	Triple ring burner body 3.5 G20 1,28 K	1
4231	ZS6433	Triple ring burner flame spreader 3.5	1
4711	ZS6772	Clamp support for main ramp	5
4838	ZS6423	Triple ring 3.5 burner nozzle G30/29 0,96	1

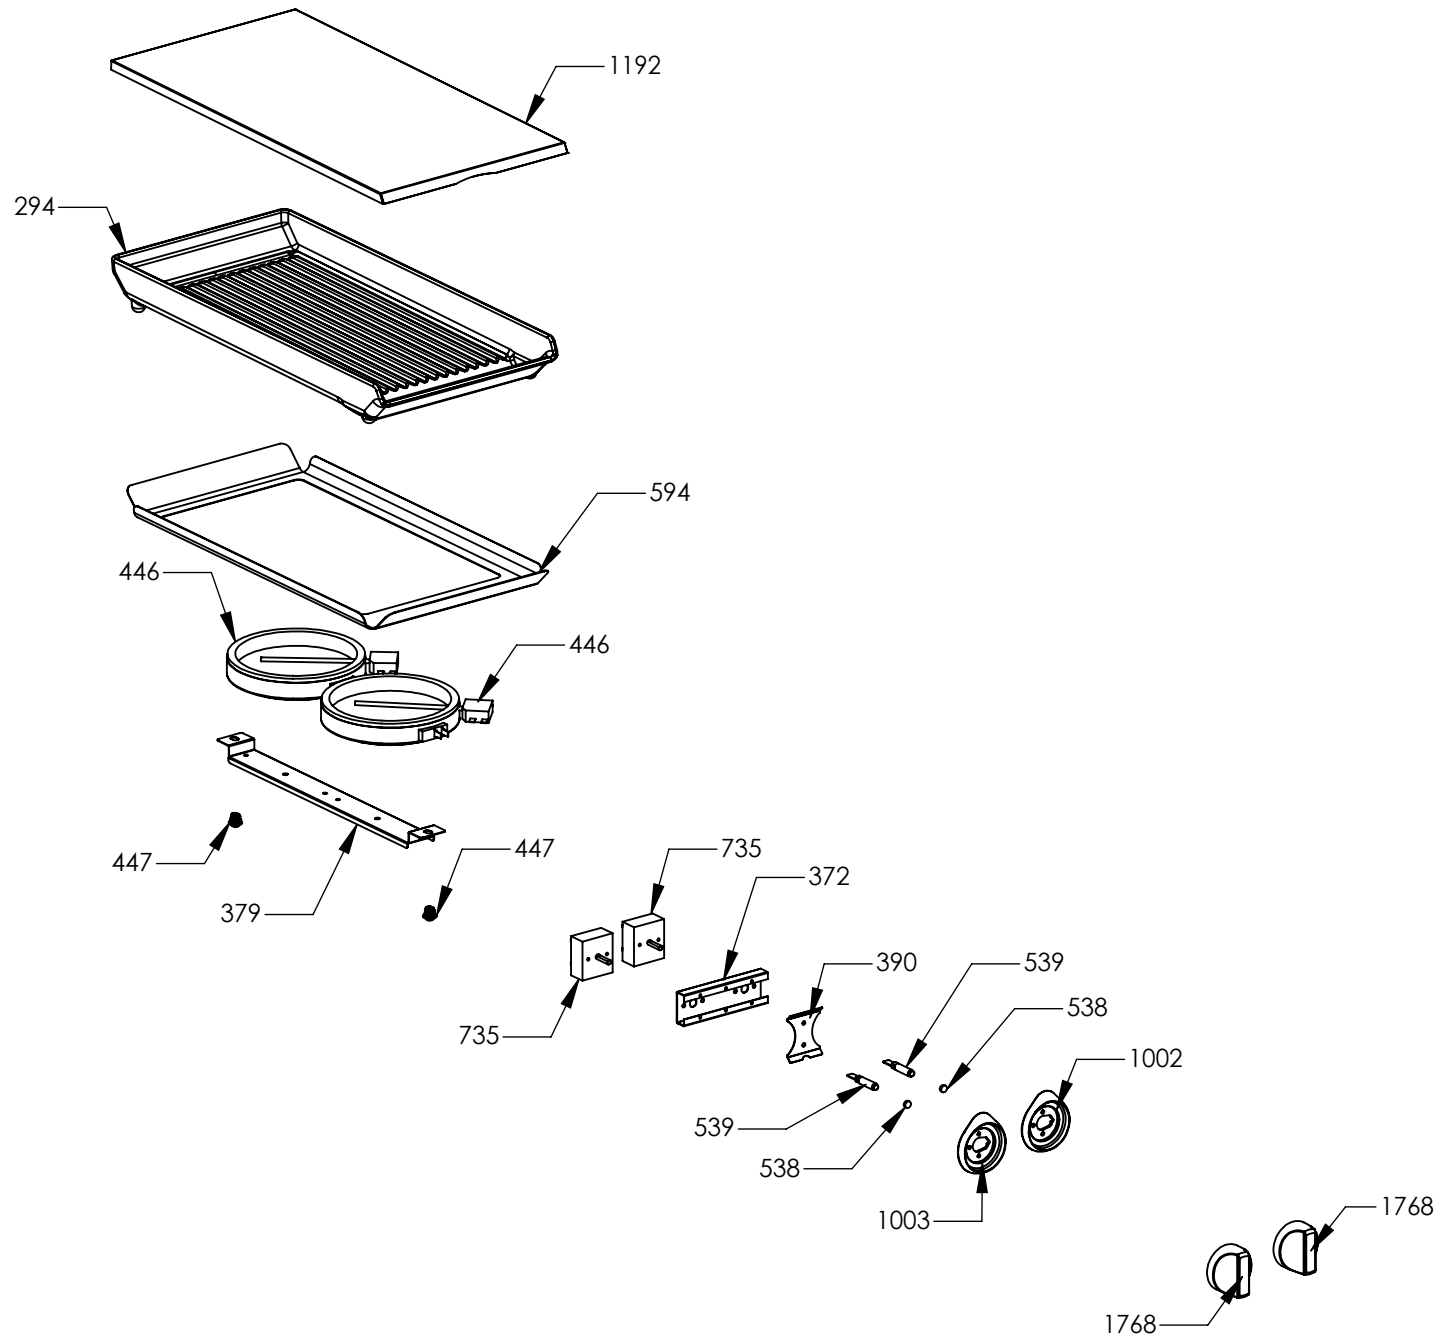

N° Object	Code	Description	Qty
294	ZS0579	Fry-top lined cast-iron griddle	1
372	ZS0803	Commutator support	1
379	ZS0820	Barbecue cast-iron griddle support	1
390	ZS0890	Spring for el. controls support	1
446	ZS1059	Heating element barbecue 1200/230 th.7	2
447	ZS1061	Spring for griddle heating el. support	2
538	ZS1204	Led transparent	2
539	ZS1205	Fluorescent green warning light	2
594	ZS1667	Protection frame for barbecue griddle	1
735	ZS1076	Energy regulator 230 V EGO EU	2
1002	ZS1650	Bezel for rear central right burner knob 58, bright chromed	1
1003	ZS1651	Bezel for front central right burner knob 58, bright chromed	1
1192	ZS0553	Fry-top/barbecue stainless steel covering	1
1768	ZS3157	Knob 58 single heating element SLT	2

N° Object	Code	Description	Qty
524	ZS1181	Wiring diagram for hob S12-6B and S12-6T	1
725	601108	Anti-overturning device	0,3
3740	ZS3397	Additional wiring ground L=10 Party cm Fem Fem	2
5050	ZS7813	Instruction booklet Top/Cooker Multilanguage	1