 
 


N° Object	Code	Description	Qty
98	481913	Terminal board for oven 32 PA 233	1
268	ZS0511	Cast-iron grid 2 burners Sintesi	2
398	ZS0935	Complete spill tray top 90 4 burners+fry-top	1
731	ZS0565	Cast-iron grid for wok	1
794	ZS1058	Vitroglass for fry-top/barbecue	1
1023	ZS2093	Sintesi upper right side clamp 62.5 extended	1
1024	ZS2094	Sintesi upper left side clamp 62.5 extended	1
1058	GR2147	Assembly frontal bar profile top 90 polished	1
1061	ZS2163	Blocking device for frontal bar profile top SLT	2
1612	ZS3020	Support for connection top-base	2
1667	ZS3012	Upper lateral panel right side	1
1668	ZS3014	Upper lateral panel left side	1
4063	ZS6375	Ramp hole closing plate	1
4072	ZS6489	Rear guard for hob 90 Genesi	1
4073	ZS6492	Lower guard for hob 90 sintesi	1
5082	ZS7958	"Steel - Stile in cucina" plate	1
5775	ZS3931	Support for back splash h. 4 cm cooker 090 Sintesi	1
5842	ZS8867	Support for back splash h. 4 cm cooker 090 Sintesi internal	1

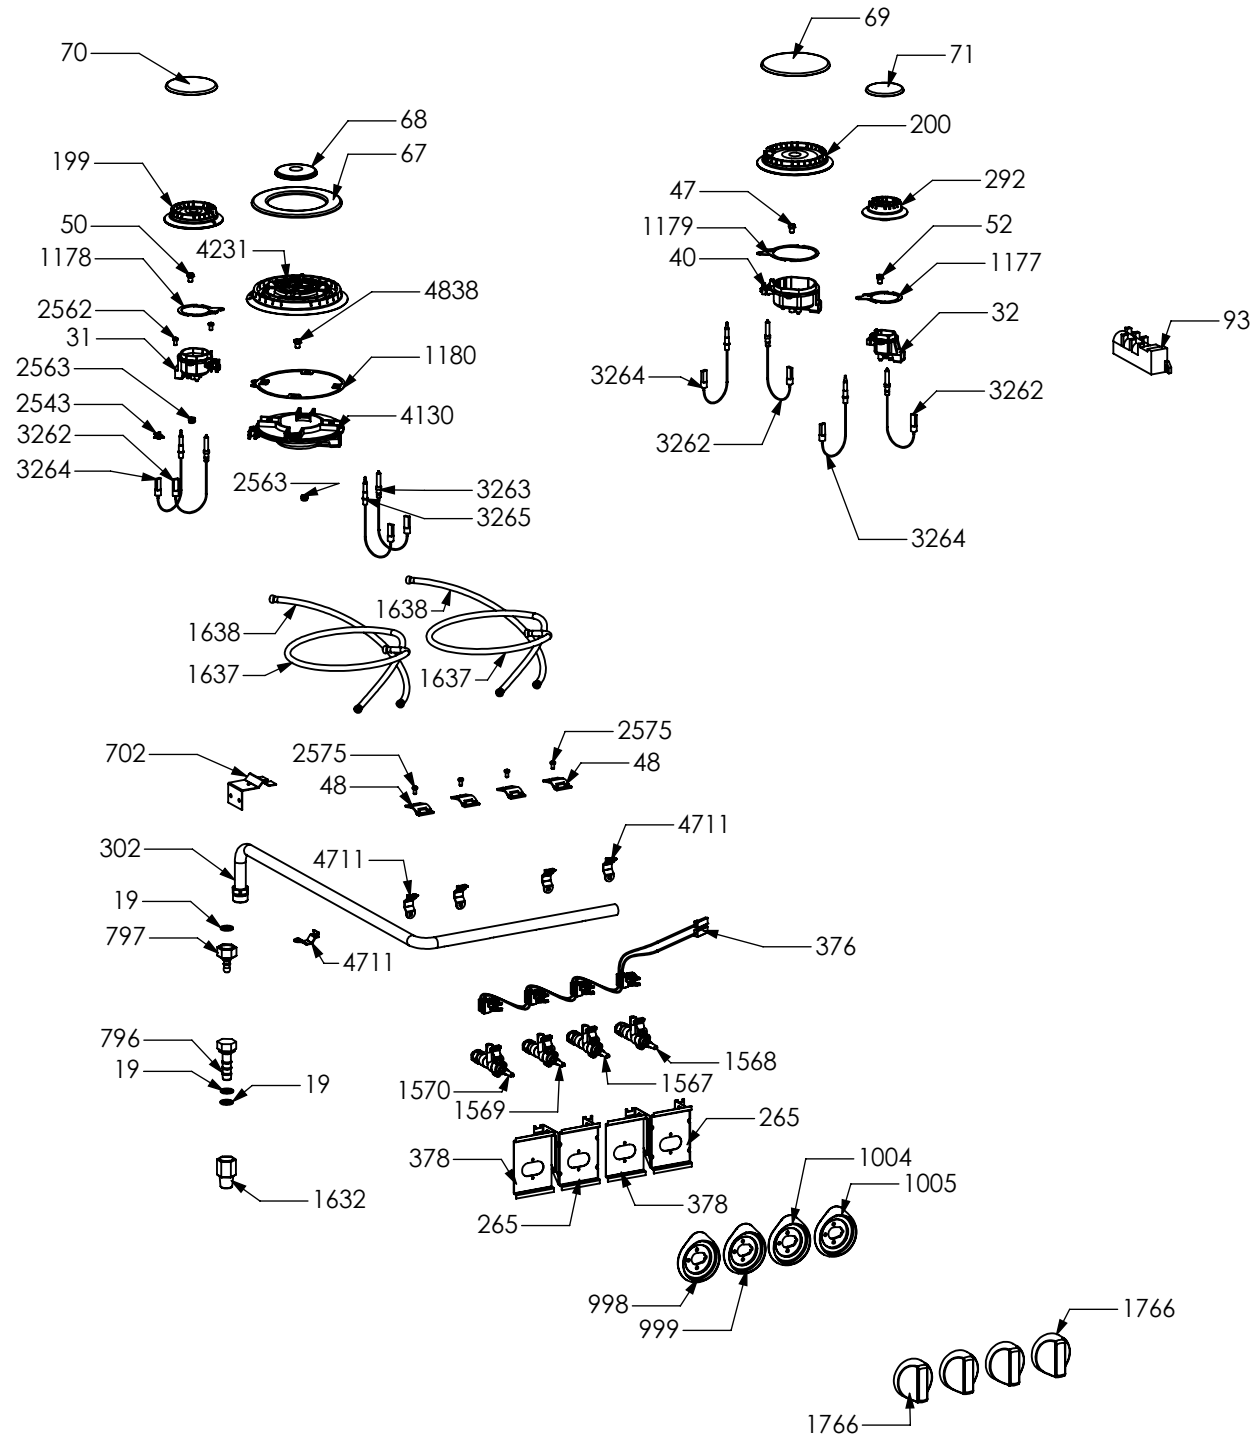

N° Object	Code	Description	Qty	N° Object	Code	Description	Qty
19	400689	Gasket gas inlet	3	1177	ZS2217	Gasket for auxiliary burner	1
31	414121	Semi-rapid burner body G20 0,97	1	1178	ZS2218	Gasket for semi-rapid burner	1
32	414123	Auxiliary burner body G20 0,72	1	1179	ZS2219	Gasket for rapid burner	1
40	414212	Rapid burner body G20 1,15	1	1180	ZS2220	Gasket for triple ring burner	1
47	421312	Rapid burner nozzle G30/31 29/37 mbar 0,85	1	1567	ZS2923	Valved tap for auxiliary burner (bypass 0,27)	1
48	421323	Gas taps fixing bridle M60	4	1568	ZS2924	Valved tap for rapid/fish-kettle burner	1
50	423948	Semi-rapid burner nozzle G30/31 0,65	1	1569	ZS2925	Valved tap for semi-rapid burner	1
52	423951	Auxiliary burner nozzle G30/30 0,50	1	1570	ZS2926	Valved tap for triple-ring burner	1
67	440400	Plate triple-crown burner	1	1632	ZS3021	Adapter female-male 1/2 BSP 04	1
68	440401	Plate central triple-crown burner	1	1637	ZS3058	Pipe ramp for front left triple ring burner cooker 90 05	2
69	440403	Plate rapid burner	1	1638	ZS3059	Pipe ramp for rear left semi-rapid burner cooker 90 05	2
70	440404	Plate semi-rapid burner	1	1766	ZS3155	Knob 58 for gas burners SLT	4
71	440405	Auxiliary burner cap	1	2543	601229	Spring fixing spark plug for triple ring P-4	1
93	481787	Ignition system 4 flames	1	2562	506037	Screw M3x8 TC s.steel	10
199	ZS0275	Semi-rapid burner flame spreader	1	2563	ZS0907	Fixing nut for themocouple	4
200	ZS0276	Rapid burner flame spreader	1	2575	505241	Screw M4	4
265	ZS0504	Ramp fixing support	2	3262	ZS5270	Burner spark plug Cast	3
292	ZS0577	Auxiliary burner flame spreader	1	3263	ZS5271	Triple ring burner spark plug Cast	1
302	ZS0594	Ramp 4 burners top 090	1	3264	ZS5272	Thermocouple Cast L=770	3
376	ZS0813	Micro catenary for 4 burners	1	3265	ZS5273	Thermocouple Cast L=750 TC 3.3	1
378	ZS0819	Under knob collars fixing support	2	4130	ZS6428	Triple ring burner body 3.5 G20 1,28 K	1
702	ZS1900	Rear ramp fixing support cooker 70/90/120	1	4231	ZS6433	Triple ring burner flame spreader 3.5	1
796	410610	Pipe holder (G20)IT	1	4711	ZS6772	Clamp support for main ramp	5
797	410645	Pipe holder (G30)	1	4838	ZS6423	Triple ring 3.5 burner nozzle G30/29 0,96	1
998	ZS1646	Bezel for front left burner knob 58, bright chromed	1				
999	ZS1647	Bezel for rear left burner knob 58, bright chromed	1				
1004	ZS1652	Bezel for front right burner knob 58, bright chromed	1				
1005	ZS1653	Bezel for rear right burner knob 58, bright chromed	1				

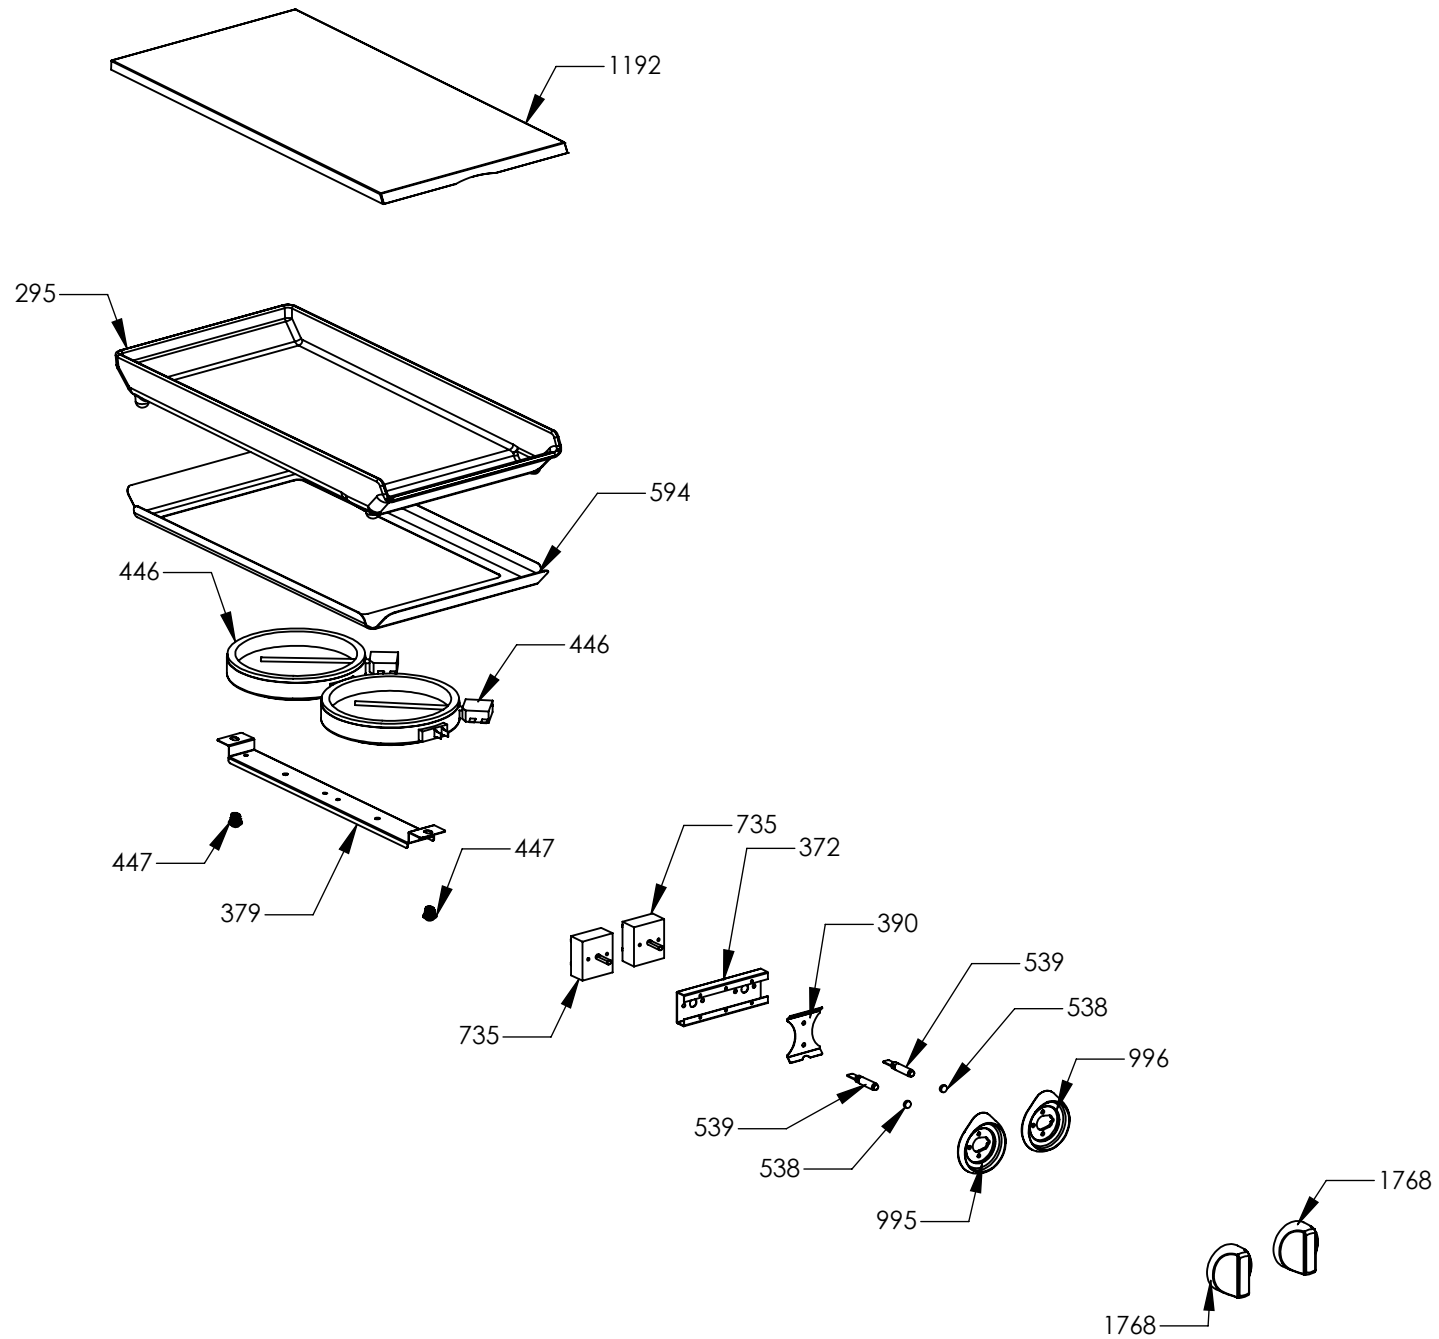

N° Object	Code	Description	Qty
295	ZS0580	Fry-top cast-iron griddle	1
372	ZS0803	Commutator support	1
379	ZS0820	Barbecue cast-iron griddle support	1
390	ZS0890	Spring for el. controls support	1
446	ZS1059	Heating element barbecue 1200/230 th.7	2
447	ZS1061	Spring for griddle heating el. support	2
538	ZS1204	Led transparent	2
539	ZS1205	Fluorescent green warning light	2
594	ZS1667	Protection frame for barbecue griddle	1
735	ZS1076	Energy regulator 230 V EGO EU	2
995	ZS1643	Bezel for front central burner knob 58, bright chromed	1
996	ZS1644	Bezel for rear central burner knob 58, bright chromed	1
1192	ZS0553	Fry-top/barbecue stainless steel covering	1
1768	ZS3157	Knob 58 single heating element SLT	2

N° Object	Code	Description	Qty
521	ZS1176	Wiring diagram for hob S9-4B and S9-4T	1
725	601108	Anti-overturning device	0,3
5050	ZS7813	Instruction booklet Top/Cooker Multilanguage	1